


## VIDEO ADAPTER VA-1

VA-1 camera adapter is option for using with Abris-M series of infrared viewers. It is designed for viewing, recording and digitization of images in near infrared spectral band, as well as real-time, hands-free monitoring. Optimized optical system (relay lens) transmit image from the screen of image converter to high resolution CCD camera (570TV lines, 1/3") without any distortion and minimum losses of radiation. The camera adapter contains aluminium body with M30x0.75 screw, relay lens and 1/3" CCD camera.

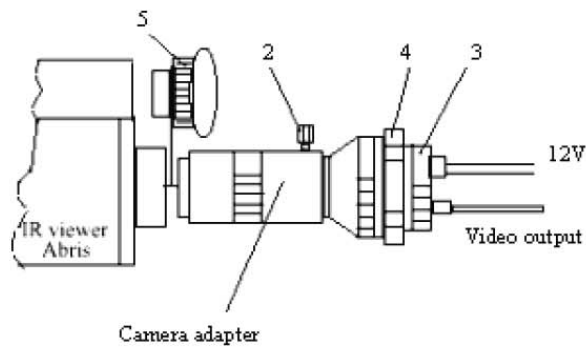

### SPECIFICATIONS

Signal format	CCIR or EIA
System resolution (center)	300 TV lines
S/N ratio	>48 dB
Distortion of image	<18%.
Video output	RCA connector
Power requirement	10...12V DC, 120 mA max.
Dimension	L 99mm x D 55 mm
Weight	200gr.